

FIG. 1

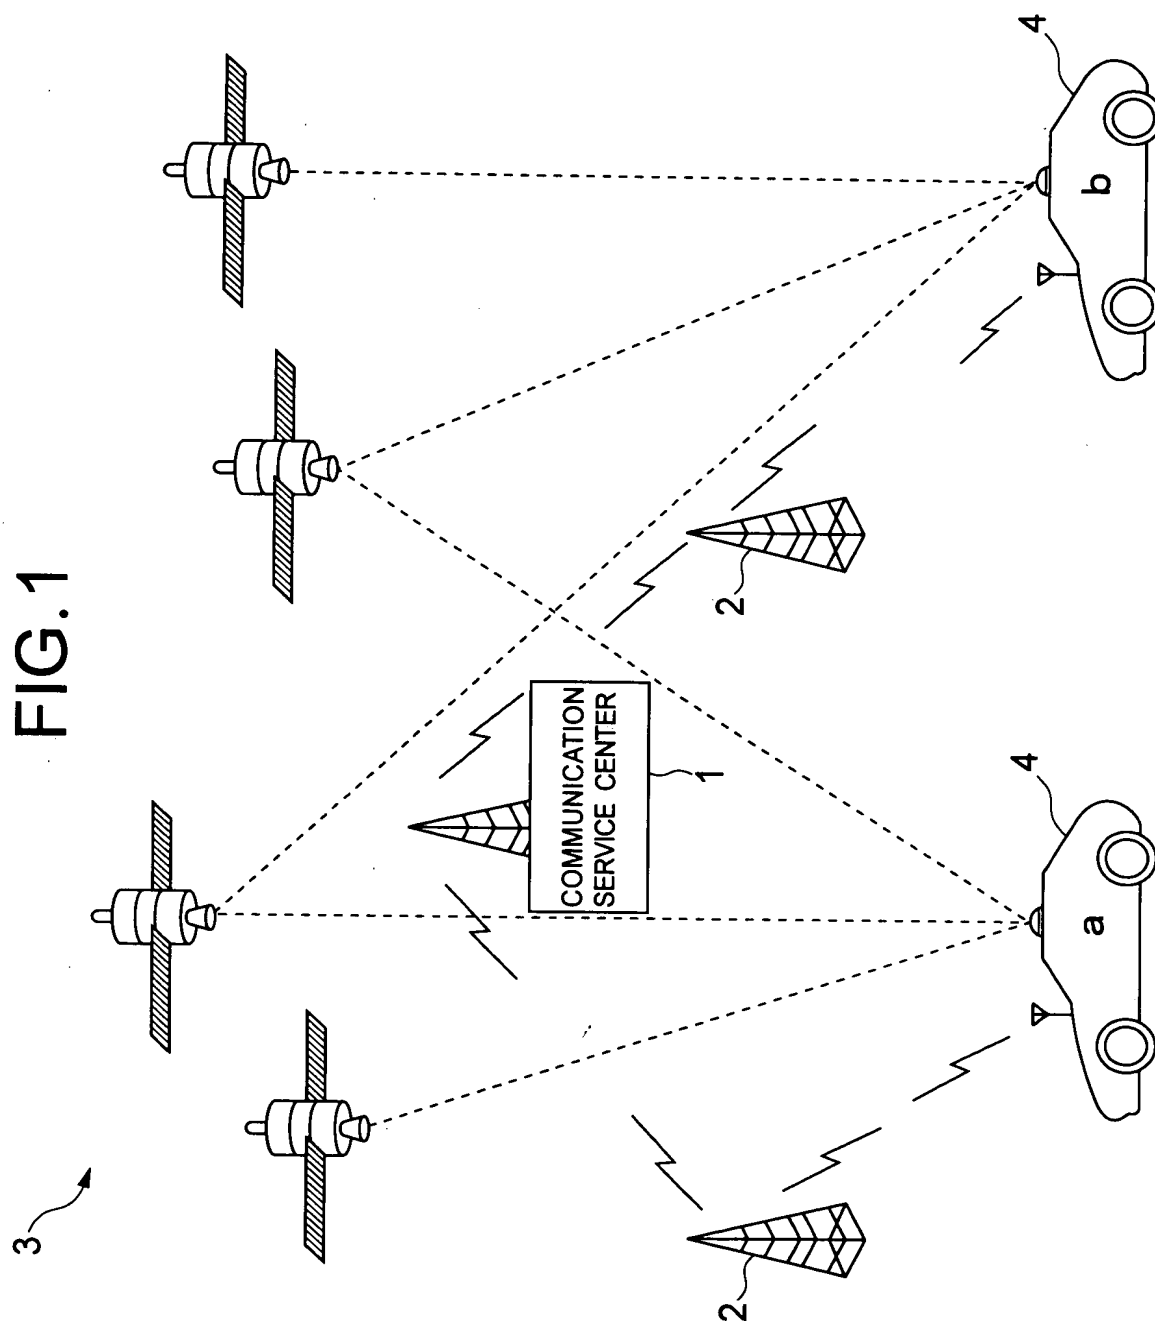


FIG. 2

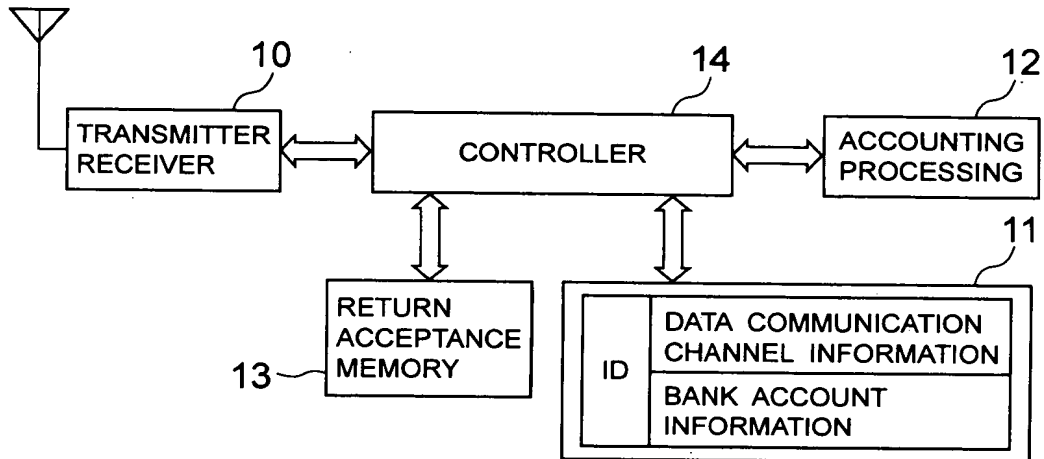


FIG. 3

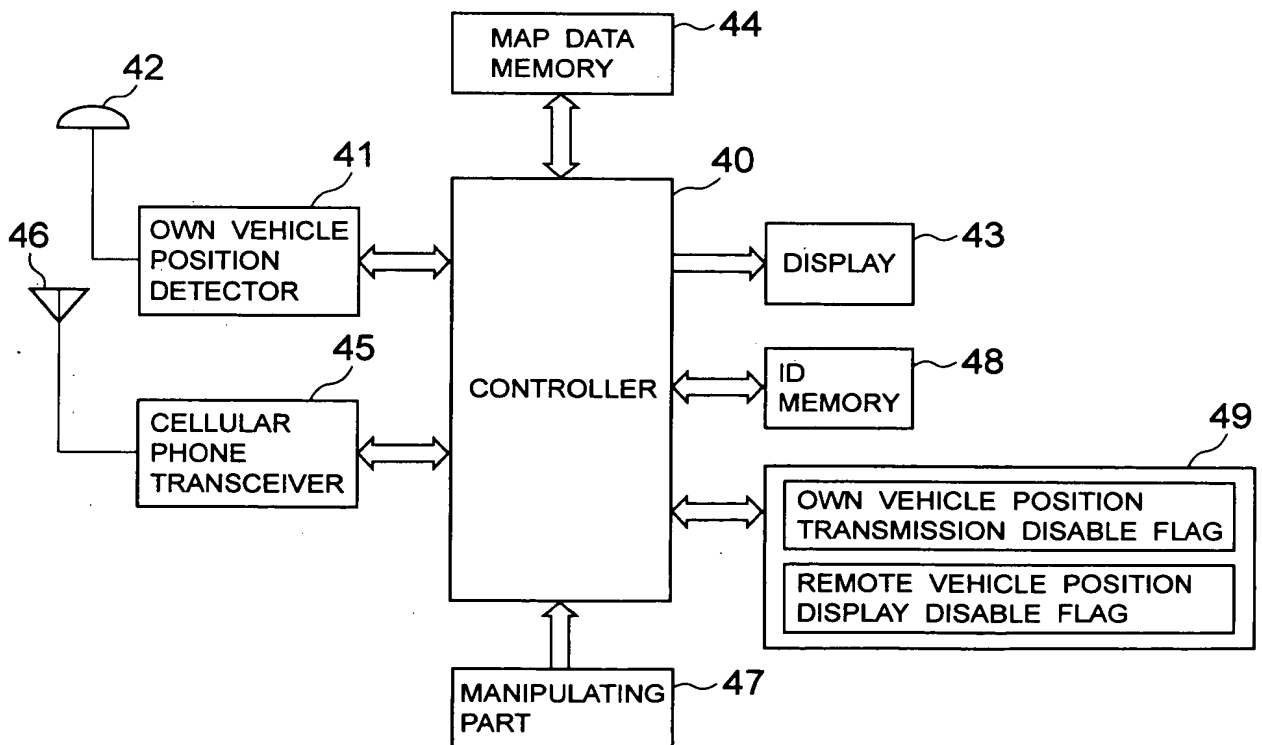


FIG. 4

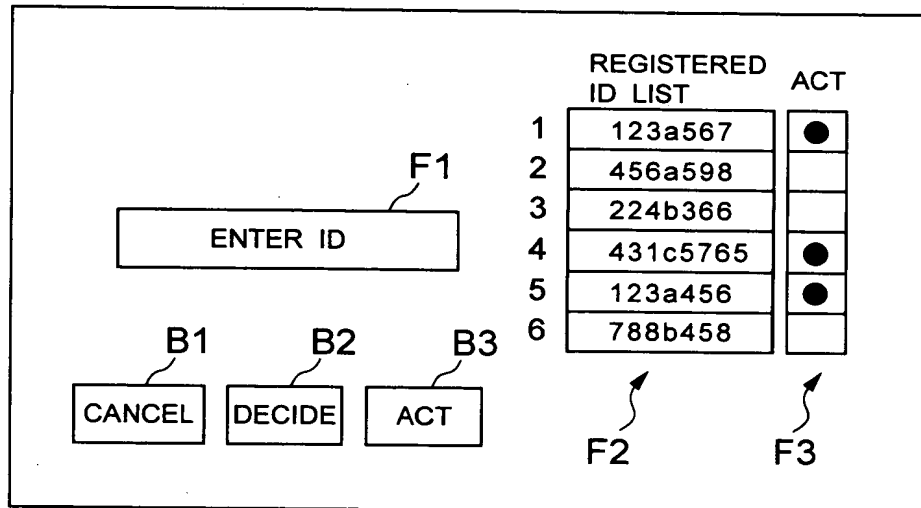


FIG. 5

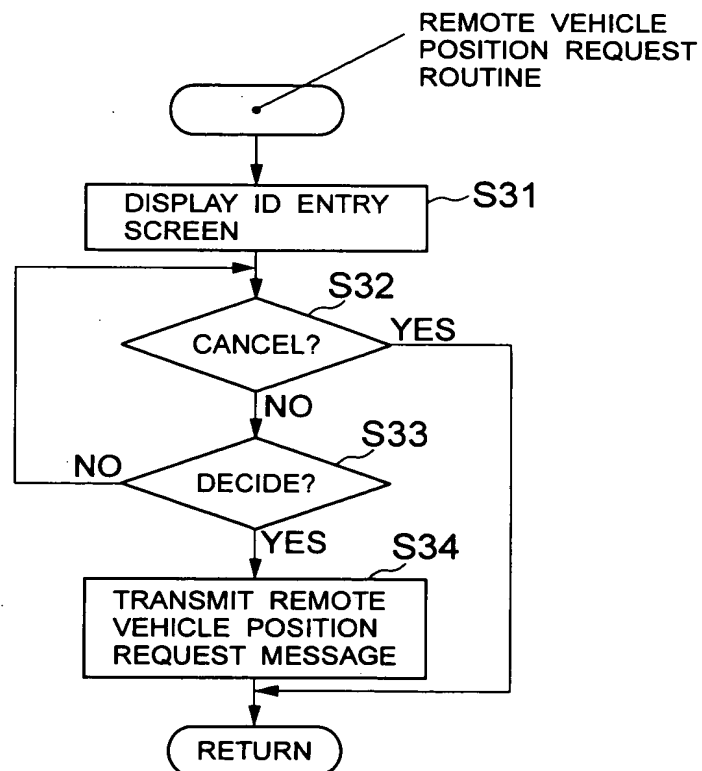



FIG.6

REMOTE VEHICLE POSITION
REQUEST MESSAGE

OPR	REQUESTING VEHICLE ID	REQUESTED VEHICLE ID
-----	--------------------------	-------------------------

OPR : REMOTE VEHICLE POSITION
REQUEST CODE

FIG.7

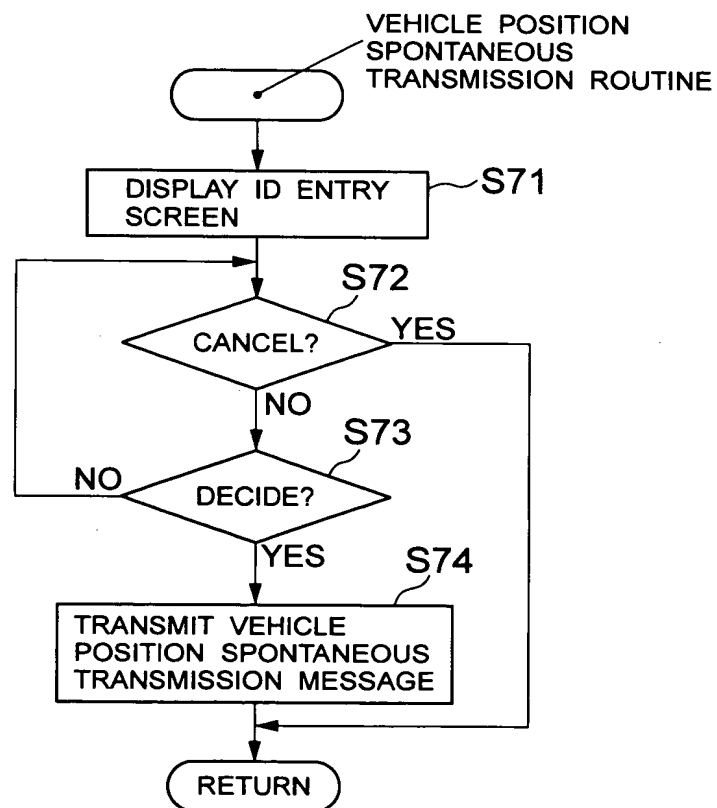

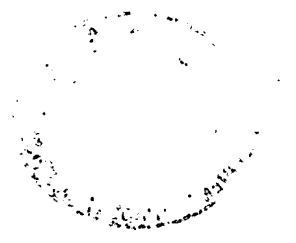



FIG.8

VEHICLE POSITION SPONTANEOUS
TRANSMISSION MESSAGE

CPT	ORIGINATING VEHICLE ID	DESTINATION VEHICLE ID	VEHICLE POSITION INFORMATION
-----	---------------------------	---------------------------	---------------------------------

CPT : VEHICLE POSITION
SPONTANEOUS TRANSMISSION CODE

FIG. 9

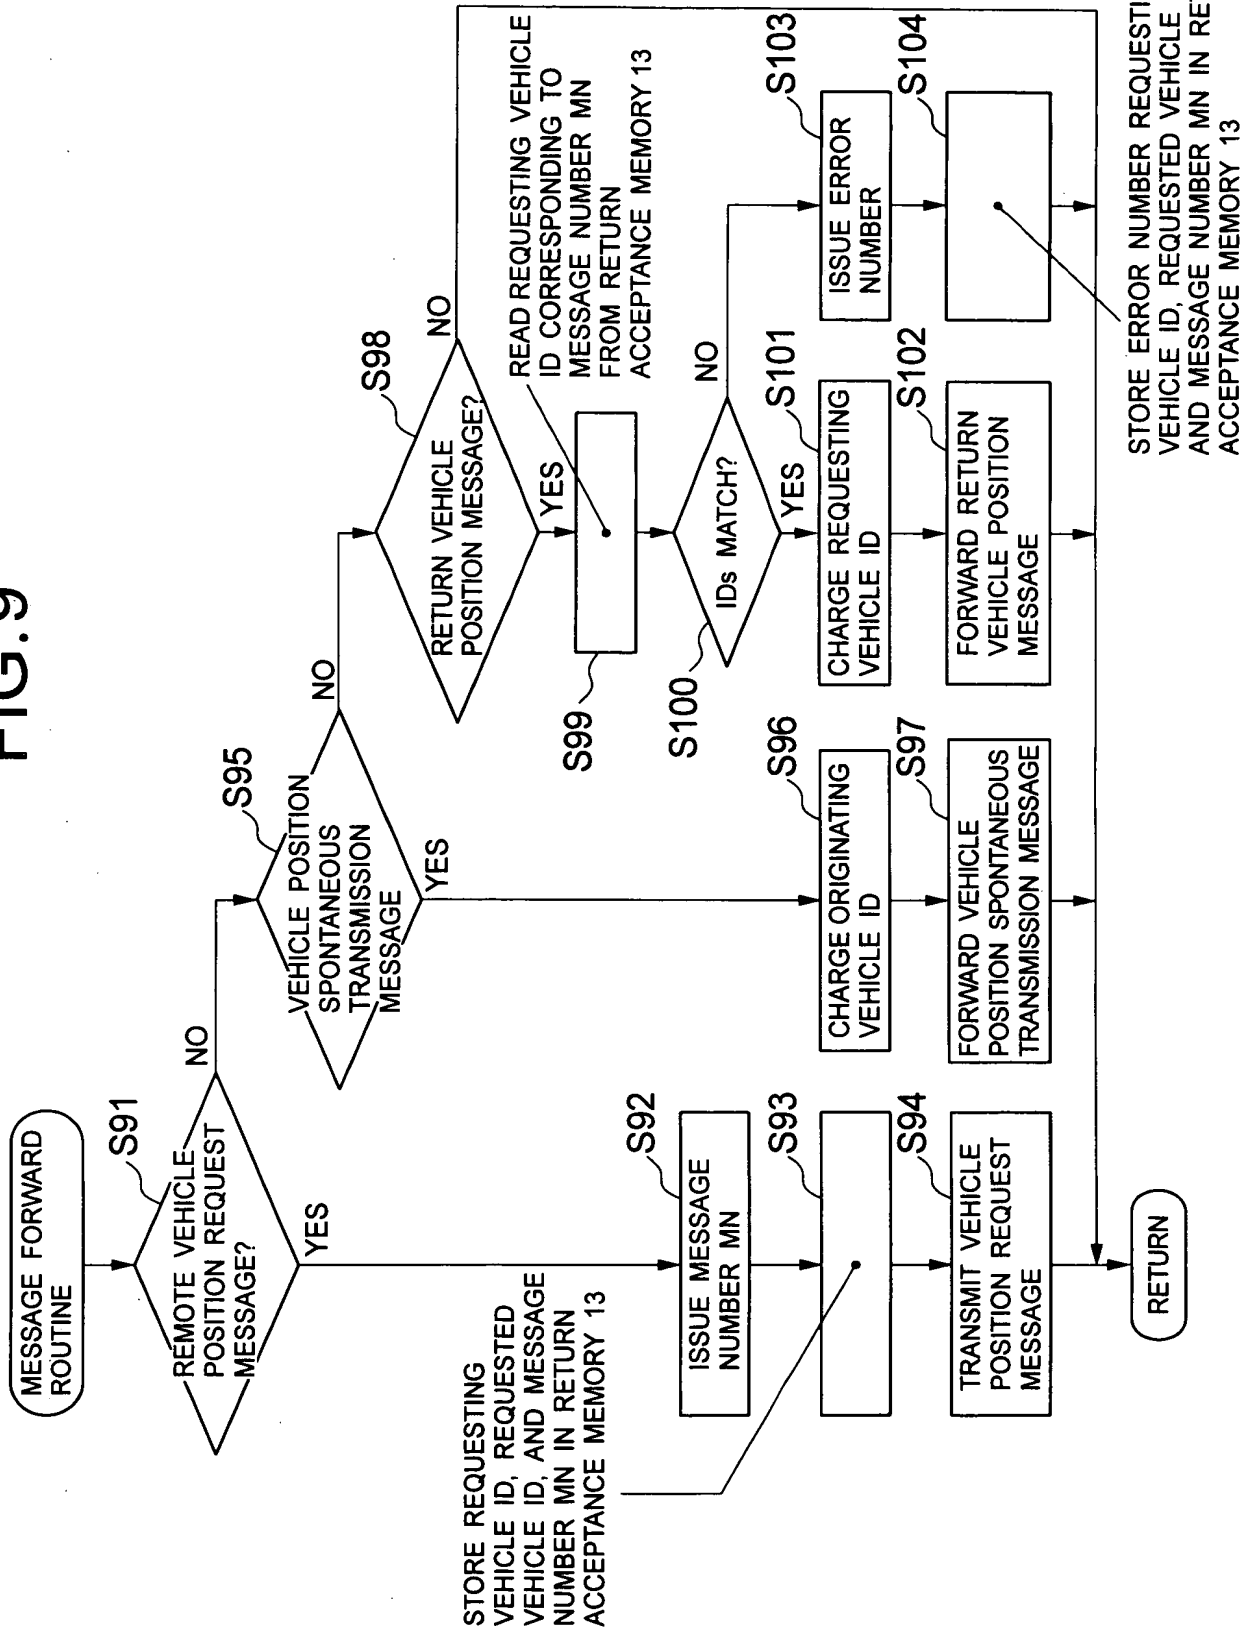

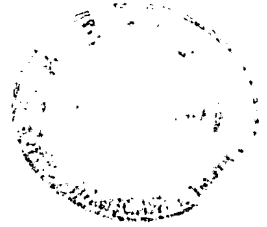


FIG.10

VEHICLE POSITION
REQUEST MESSAGE

CPR	REQUESTING VEHICLE ID	REQUESTED VEHICLE ID	MESSAGE NUMBER
-----	--------------------------	-------------------------	-------------------

CPR : VEHICLE POSITION REQUEST CODE

FIG.11

RETURN VEHICLE
POSITION MESSAGE

RCP	REQUESTING VEHICLE ID	REQUESTED VEHICLE ID	MESSAGE NUMBER MN	VEHICLE POSITION INFORMATION
-----	--------------------------	-------------------------	----------------------	---------------------------------

RCP : RETURN VEHICLE POSITION CODE

FIG. 12

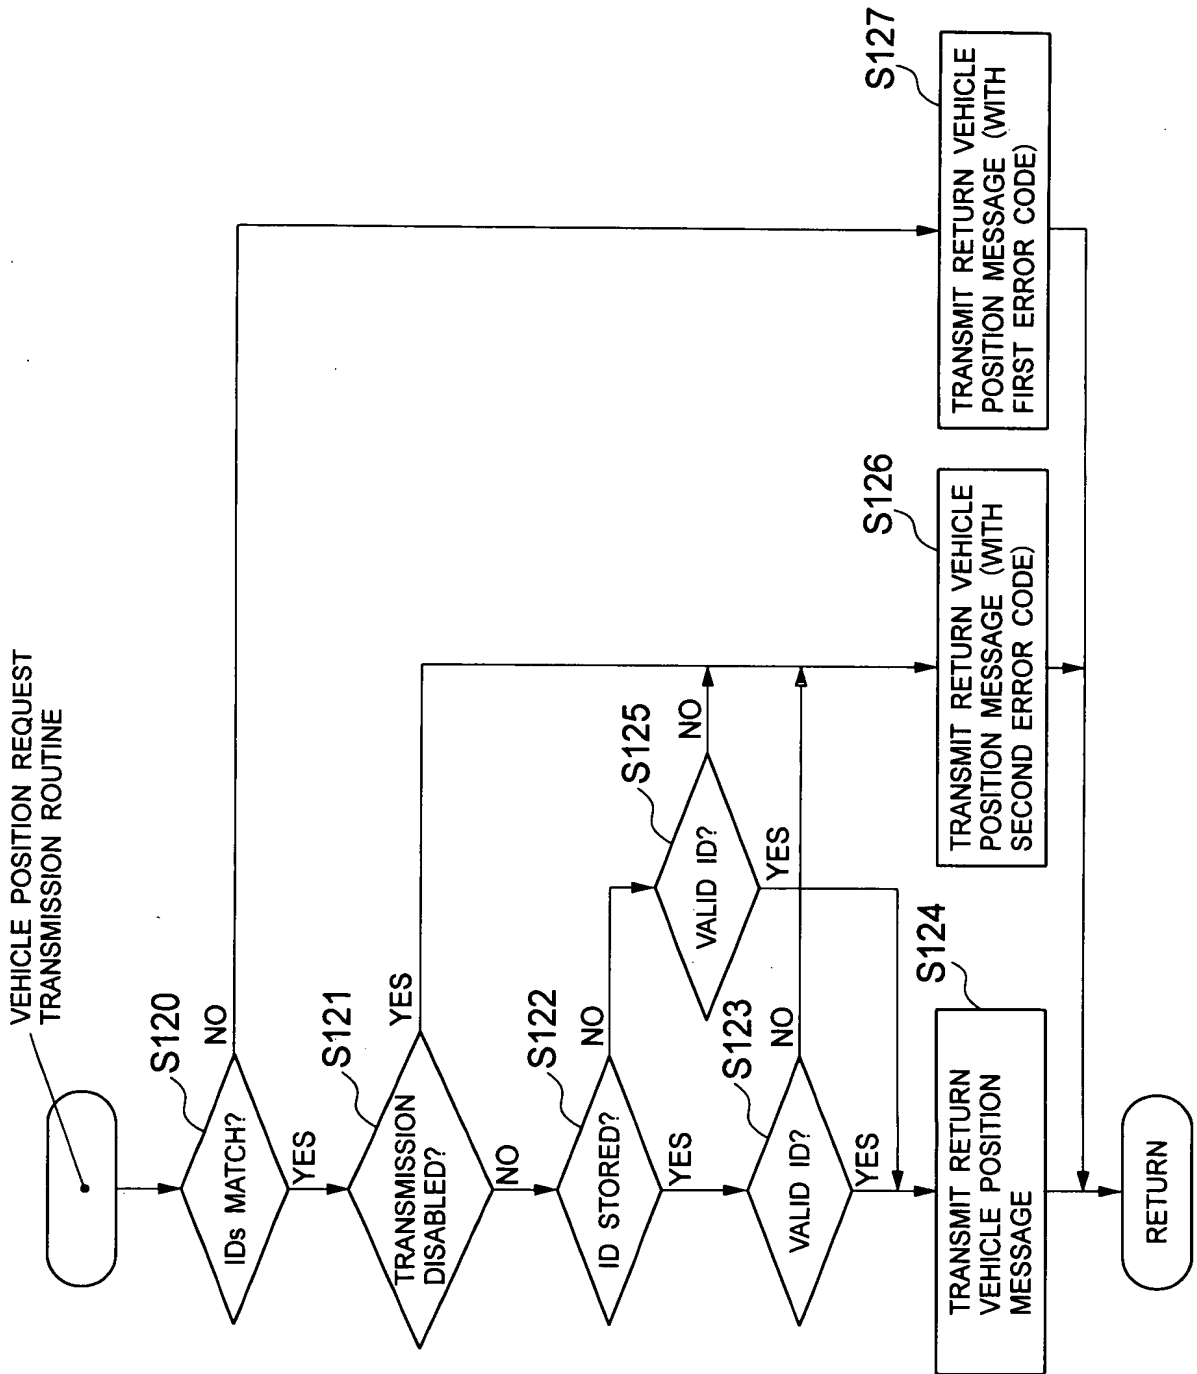




FIG.13

RETURN VEHICLE
POSITION MESSAGE

RCP	REQUESTING VEHICLE ID	REQUESTED VEHICLE ID	MESSAGE NUMBER MN	ERR1
-----	--------------------------	-------------------------	----------------------	------

RCP : RETURN VEHICLE POSITION CODE

ERR1 : FIRST ERROR CODE

FIG.14

RETURN VEHICLE
POSITION MESSAGE

RCP	REQUESTING VEHICLE ID	REQUESTED VEHICLE ID	MESSAGE NUMBER MN	ERR2
-----	--------------------------	-------------------------	----------------------	------

RCP : RETURN VEHICLE POSITION CODE

ERR2 : SECOND ERROR CODE

FIG. 15

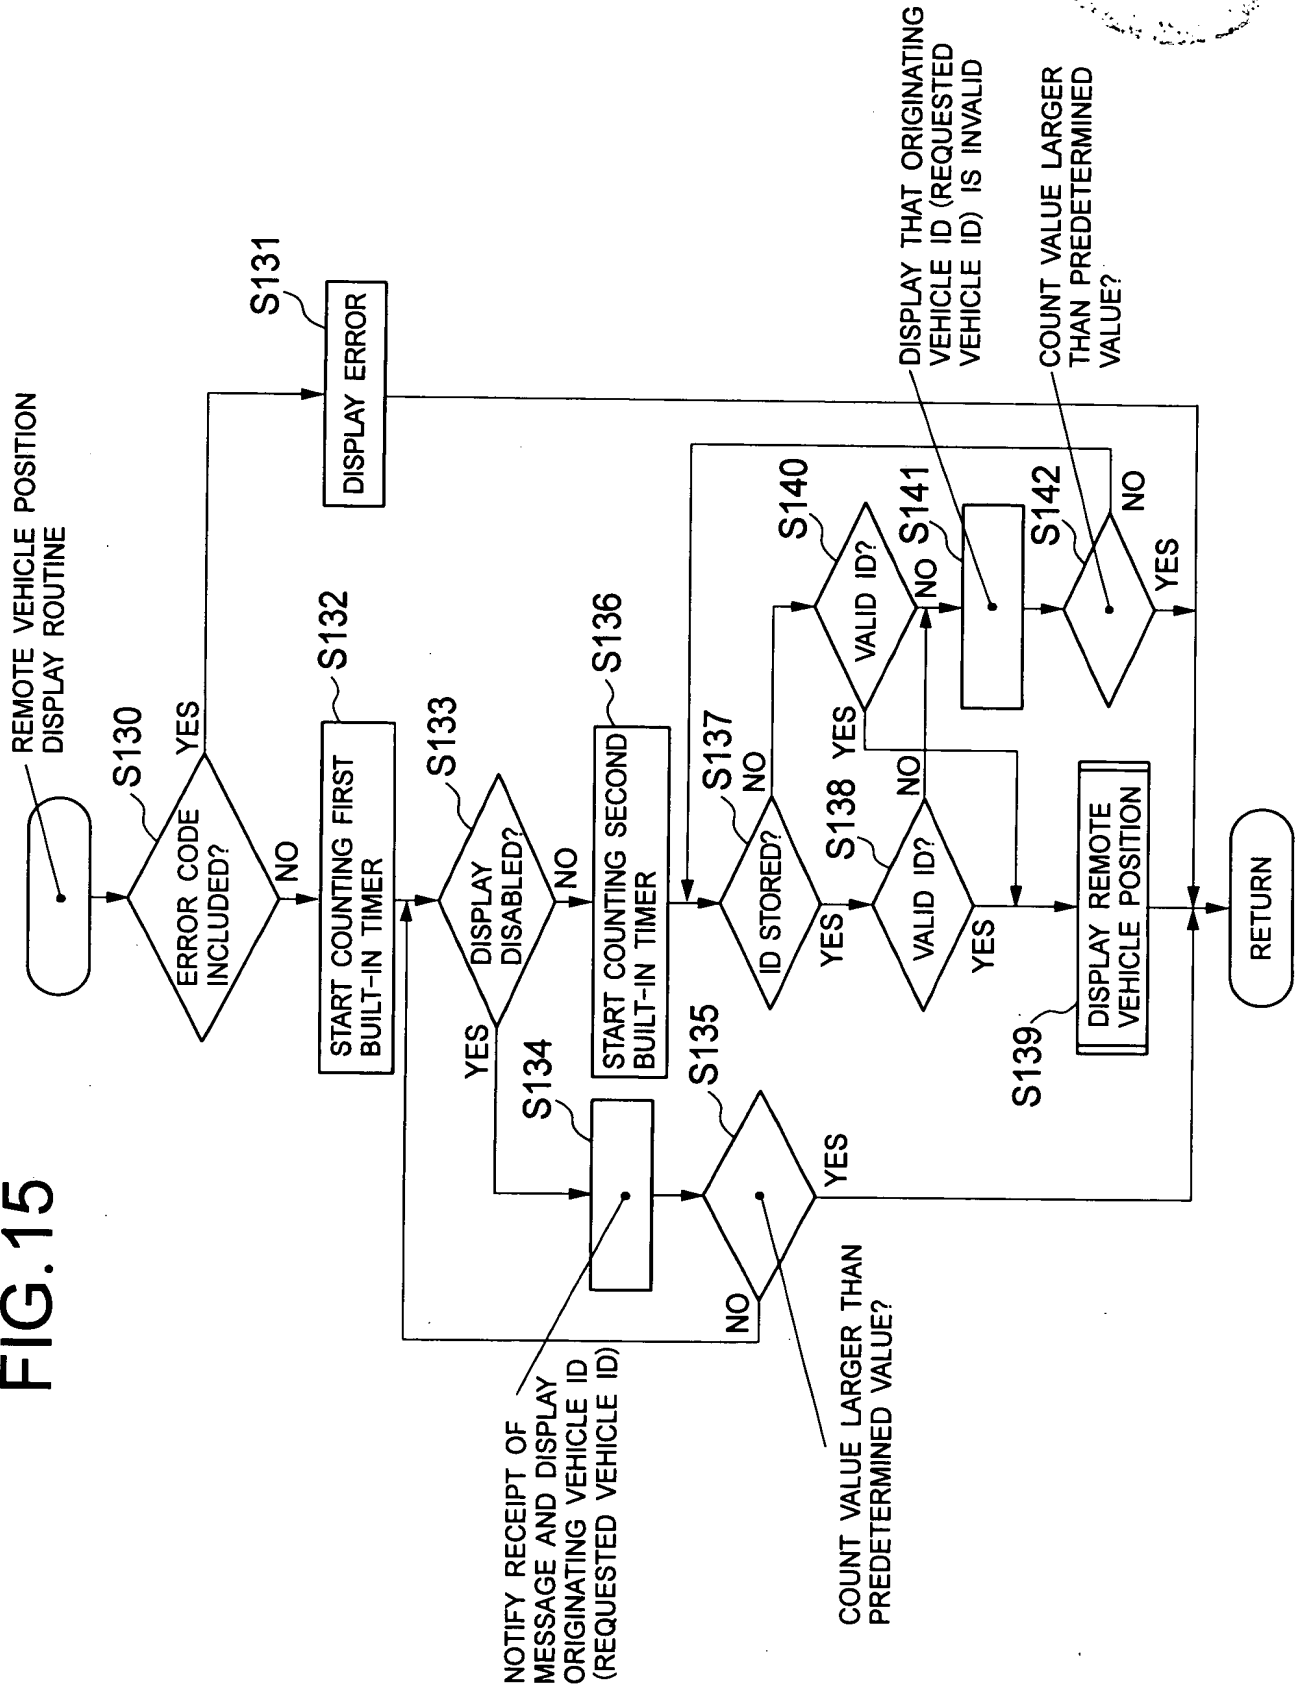


FIG. 16

(REMOTE VEHICLE POSITION DISPLAY MODE)

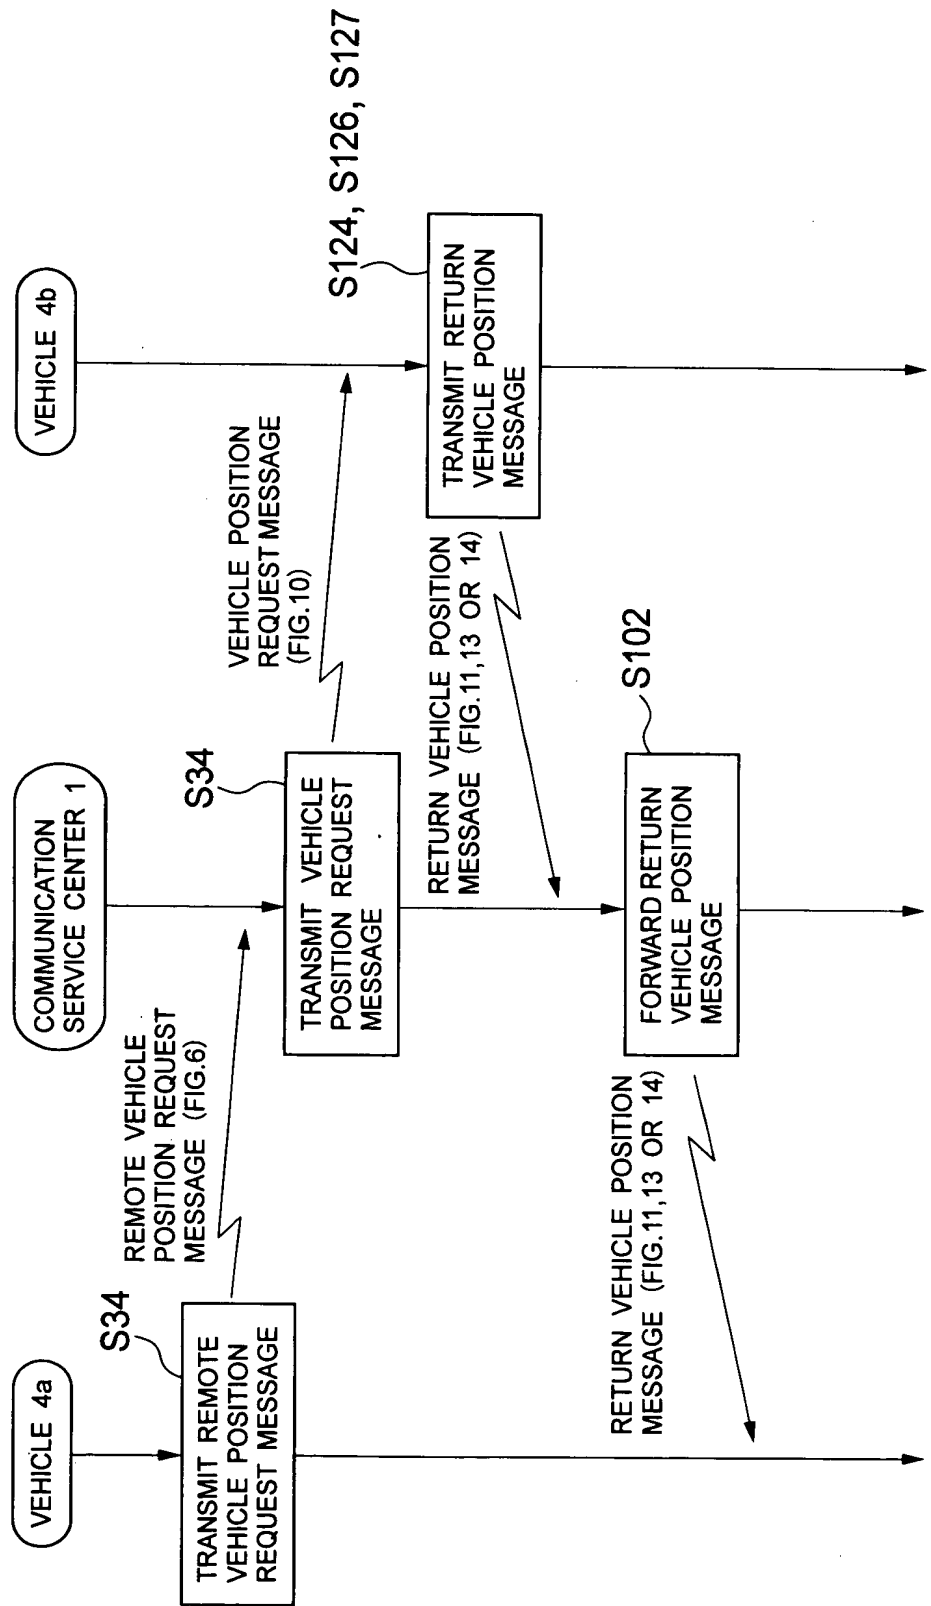


FIG.17

